

WIRELESS NAIL DRILL

Rechargeable electric nail drill



Packing List

- 1 Host*1
- 2 Nail Drill*1
- 3 Drill Bits*6
- 4 Adapter*1
- 5 Instruction Manual*1

Speciation

- 1 Power:25W
- 2 Rotary speed:35000RPM
- 3 Charger output:9V 1A
- 4 Product size:19*8.5*7.3cm
- 5 Charging time:1.5H
- 6 Battery capacity:4000mAh

Instruction Manual

- 1 Turn on/Off: Long press the center of the circular button for 3 seconds.

- 2 Speed regulation: When starting up, the motor rotates in the same direction as when it was turned off by default.


Turn the knob clockwise to increase the speed, <display 00-35>

Turn the knob counterclockwise to decrease the speed, <display 35-00>

- 3 Reverse rotation: Quick double-click the button to change direction, <F-Forward, R-Reverse>

- 4 Battery Status:Display power of battery when starting up. <00-99> Full power is displayed as 99.


- 5 Pause/Resume: Click the button to "pause", and click again to "resume".

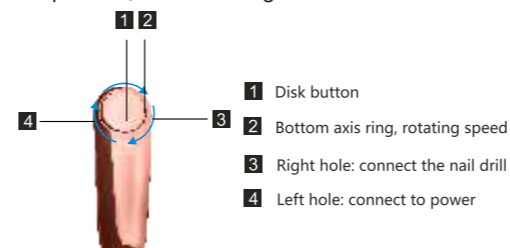

Additional Features

- 1 Rotate the knob while displaying the battery level, and immediately jump to display the speed.
- 2 When the battery level is less than 35%, the display will flicker
- 3 When charging when the machine is turned off, the display will light up and show the power.

Method of replacing drill bit

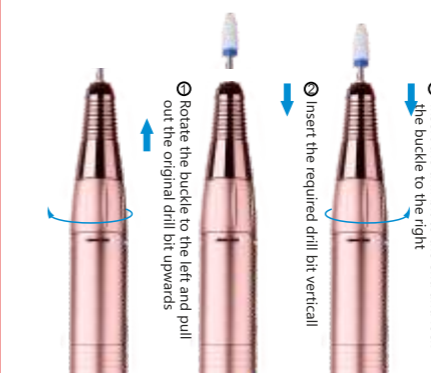

⚠ The machine must be stopped before changing the drill bit!

Precautions

- 1 The charging must be turned off to ensure safety.
- 2 To ensure safety, please avoid use by children; if you find abnormal vibration, sound, or heat, please stop using it.
- 3 Please cut off the power supply before replacing the drill bit, and be sure to insert the drill bit into the bottom of the chuck, otherwise the drill bit will easily fall off due to vibration, which brings risks.
- 4 Do not use curved, deformed, or broken drill bit, and keep it in a clamped shape when not using sanding pens, Insert the mold needle.
- 5 It contains batteries and motors. Do not clean the main unit and polish the pen with water directly; non-professionals do not disassemble the main unit and polish the pen.
- 6 Suitable for all kinds of 3/32" nail drill bits.
- 7 Please do not touch any rotating parts to avoid injury.

BEZPRZEWODOWA FREZARKA AKUMULATOROWA



Zawartość:

- 1 Baza x1
- 2 Rączka x1
- 3 Frezy x6
- 4 Ładowarka x1
- 5 Instrukcja obsługi

Specyfikacja

- 1 Moc: 25W
- 2 Prędkość: 35 000 obr/min
- 3 Ładowarka: 9V 1A
- 4 Wymiary: 19x8,5x7,3 cm
- 5 Czas ładowania: 1,5 h
- 6 Pojemność baterii: 4000 mAh

Instrukcja obsługi

- 1 Włączanie/wyłączanie: Wciśnij i przytrzymaj przez 3 sekundy regulator obrotów.

- 2 Regulacja obrotów: Po włączeniu frezarki silnik obraca się w tym samym kierunku w którym był wyłączony.


Obróć pokrętkę zgodnie z ruchem wskazówek zegara by zwiększyć prędkość (wyświetlacz 00-35)

Obróć pokrętkę w kierunku przeciwnym do ruchu wskazówek zegara by zmniejszyć prędkość (wyświetlacz 35-00)

- 3 Zamiana kierunku obrotów: Szybko dwukrotnie wciśnij przycisk aby zmienić kierunek (F: do przodu) (R: wstecz)


- 4 Sprawdzanie naładowania baterii: Moc jest wyświetlana podczas włączenia urządzenia (00-99) Pełne naładowanie baterii wyświetlane jest jako 99

- 5 Pauza/wznowienie: Kliknij przycisk aby „wstrzymać”, następnie kliknij ponownie by „wznović”.

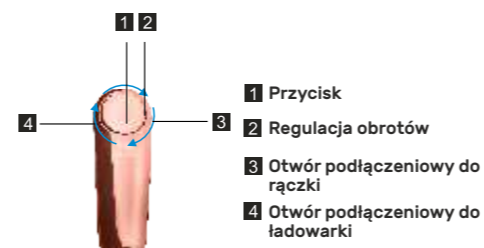

Funkcje dodatkowe

- 1 Obróć pokrętkę podczas wyświetlania stanu baterii, by przejść do regulacji obrotów
- 2 Gdy poziom baterii spadnie poniżej 35%, wyświetlacz będzie migotać.
- 3 Podczas ładowania, gdy urządzenie jest wyłączone, wyświetlacz zaświeci się i pokaże stan naładowania baterii.

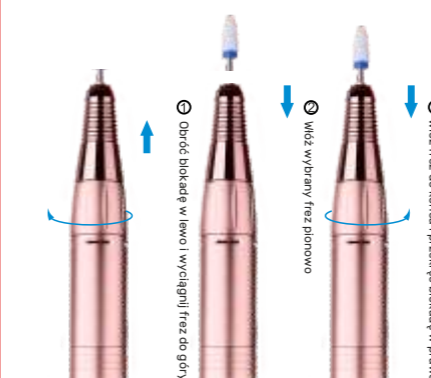

⚠ ABY WYMIENIĆ FREZ, ZATRZYMAJ URZĄDZENIE

Środki ostrożności

- 1 Nie zostawiaj podłączonej frezarki do prądu bez nadzoru
- 2 Należy unikać używania przez dzieci. Jeśli zauważysz dziwne wibracje, dźwięki, ciepło, natychmiast przestań używać urządzenia.
- 3 Odłącz zasilanie przed wymianą frezu i pamiętaj że należy je włożyć do końca, w przeciwnym razie frez może wypaść i stworzyć niebezpieczeństwo
- 4 Nie używaj zakrzywionych, zdeformowanych i uszkodzonych frezów.
- 5 Zawiera baterie i silnik. Unikaj zamoczeń, nie używaj wody do czyszczenia. Nie należy samemu otwierać urządzenia.
- 6 Nadaje się do wszystkich rodzajów frezów 3/32"
- 7 Nie dotykaj obracających się części, aby uniknąć obrażeń.